Bendy Low/Tall

Assembly Guide

pedestal



# Bendy Low/Tall


Congrats on your new Pedestal product, and welcome to the world of Pedestal. You have entered a colorful world of design items made for you to elevate your interior design.

Deeply rooted in the Scandinavian design tradition, our products reflect our commitment to quality, functionality and simplicity.

Let's go on a colorful journey together - where form follows function playfully!

/Pedestal

### Tools

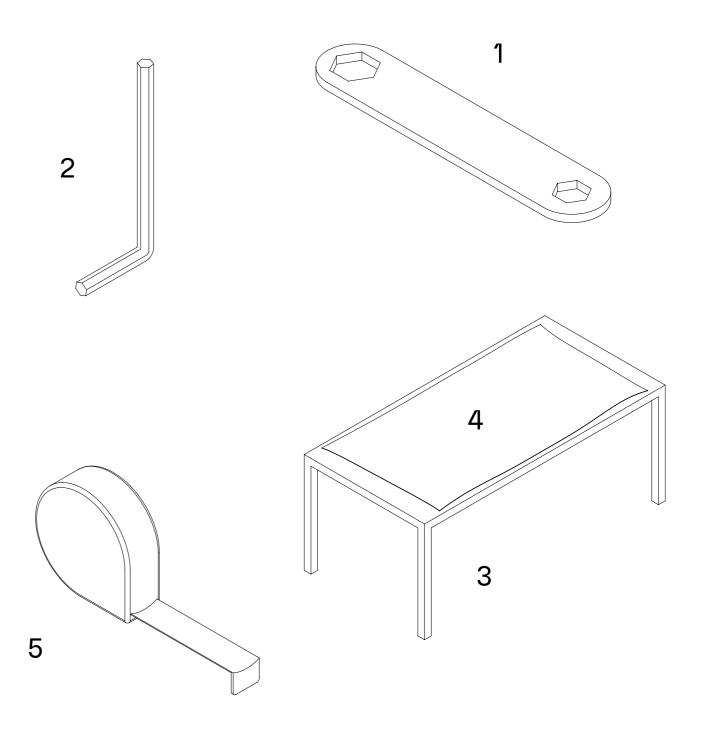


#### You will need the tools listed below:

- 1: Wrench (Provided in the hardware bag)
- 2: Hex key (Provided in the hardware bag)
- 3: Table
- 4: Soft cloth or blanket
- 5: Tape measure or ruler
- Assisting friend



# 1.0 Floor protection

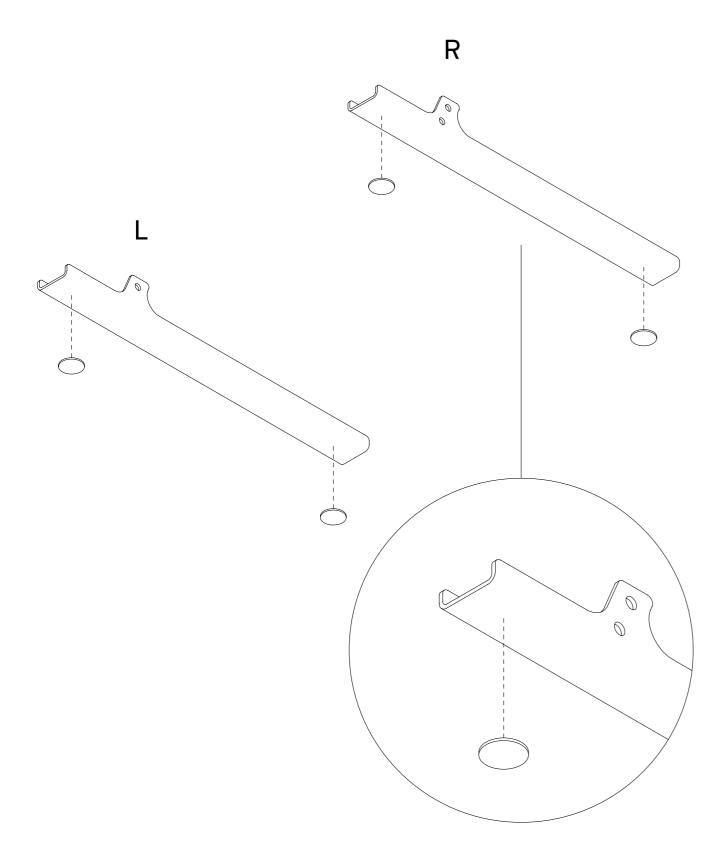


#### Task

Place the adhesive rubber dots onto the bottom of the feet. Two on each foot.

#### **Parts**

# 2.0 Right side

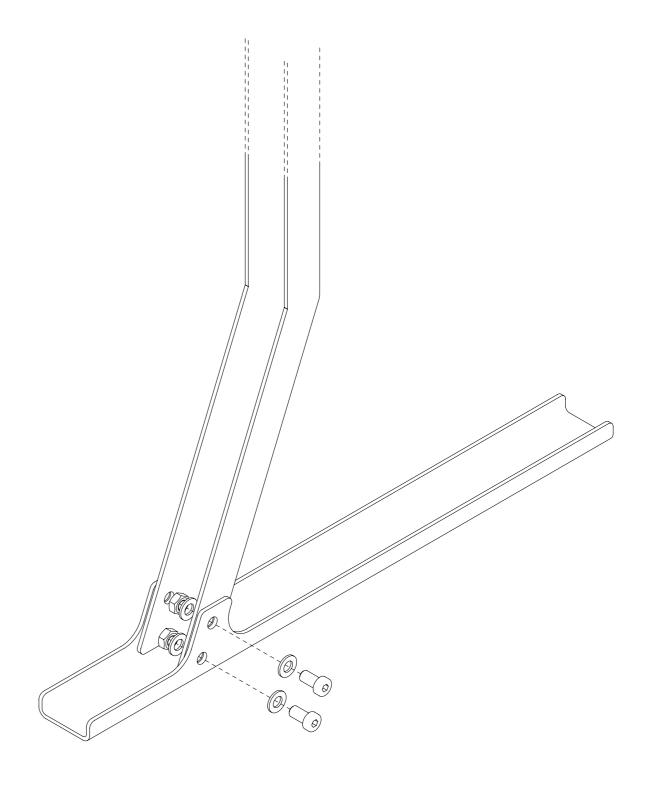

#### Task

Mount the right leg to the right foot. Start by loosely fitting bolts, washers and nuts on the side with four aligning holes, as shown.

Advice: See step 2.2 for a detailed view.

#### **Parts**

- $2 \times M8 \times 16 \text{ mm bolts}$
- 4 × M8 washers
- 2 × M8 nuts



# 2.1 Right side

#### Task


Now fit the last set of bolt, washers and nut into the remaining two aligning holes. Finally tighten all three connections.

In doubt? See step 2.2 for a detailed view

#### **Parts**

- $1 \times M8 \times 16 \text{ mm bolt}$
- 2 × M8 washers
- $1 \times M8$  nut


# 2.2 Right side detail

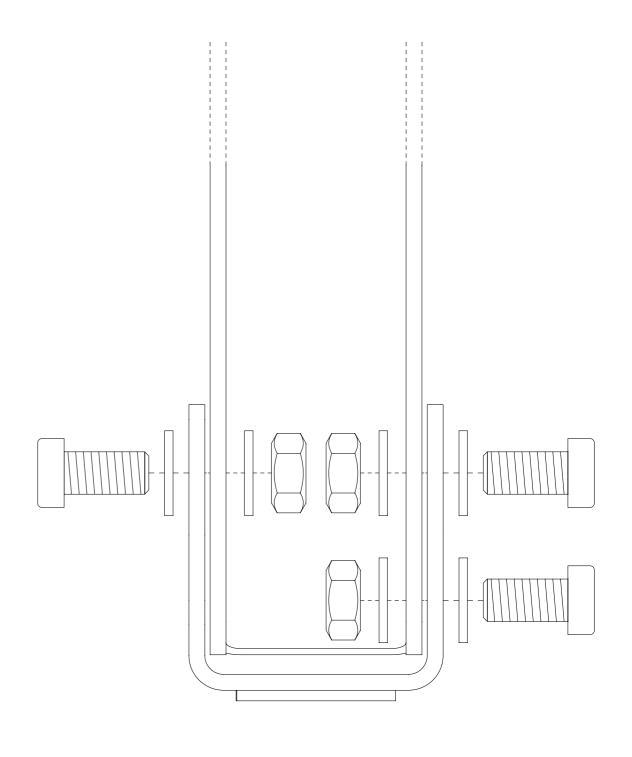


#### Task

3.0 Left side

Same as the right side

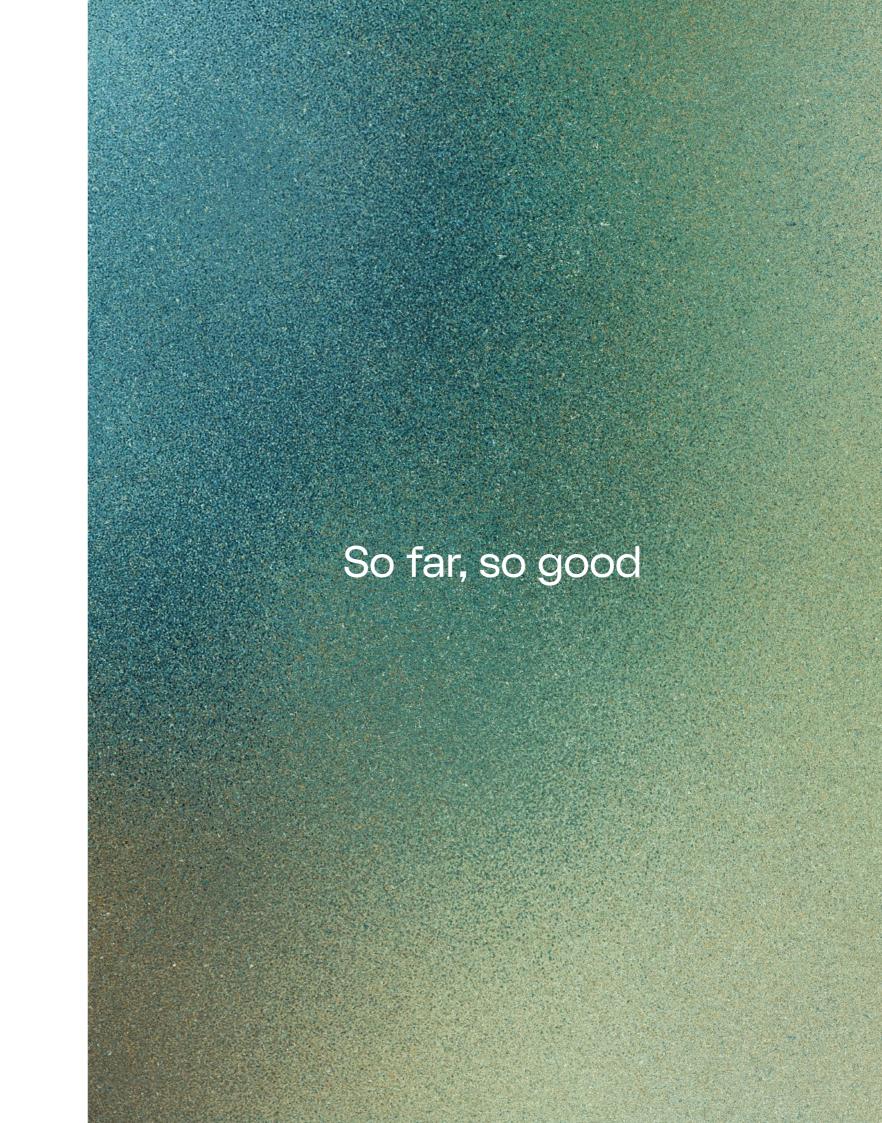

## 4.0 Measure screen

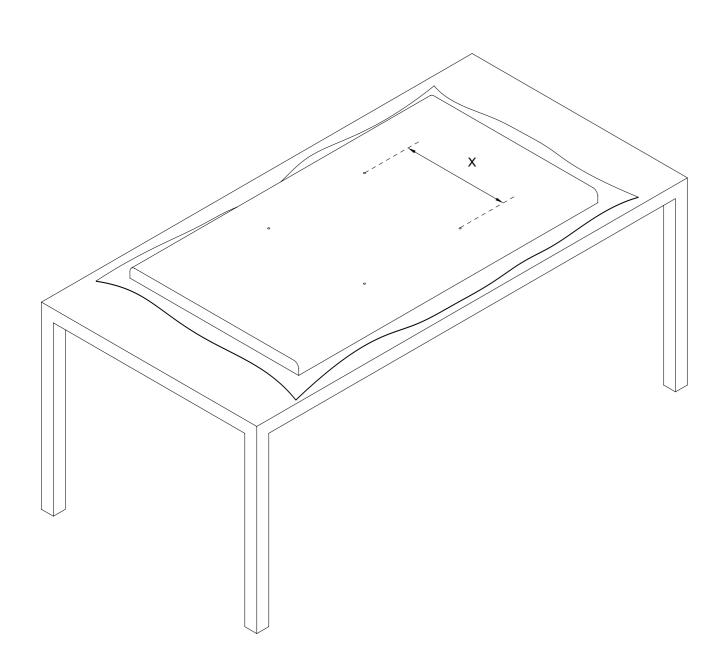


#### Task

Place your screen facing backside up on a tabletop with a soft cloth or blanket between the two in order to protect both.

#### **Parts**

- $1 \times \text{Table}$
- 1 × Soft cloth or blanket
- 1 × Tape measure or ruler

## 5.0 Mount brackets

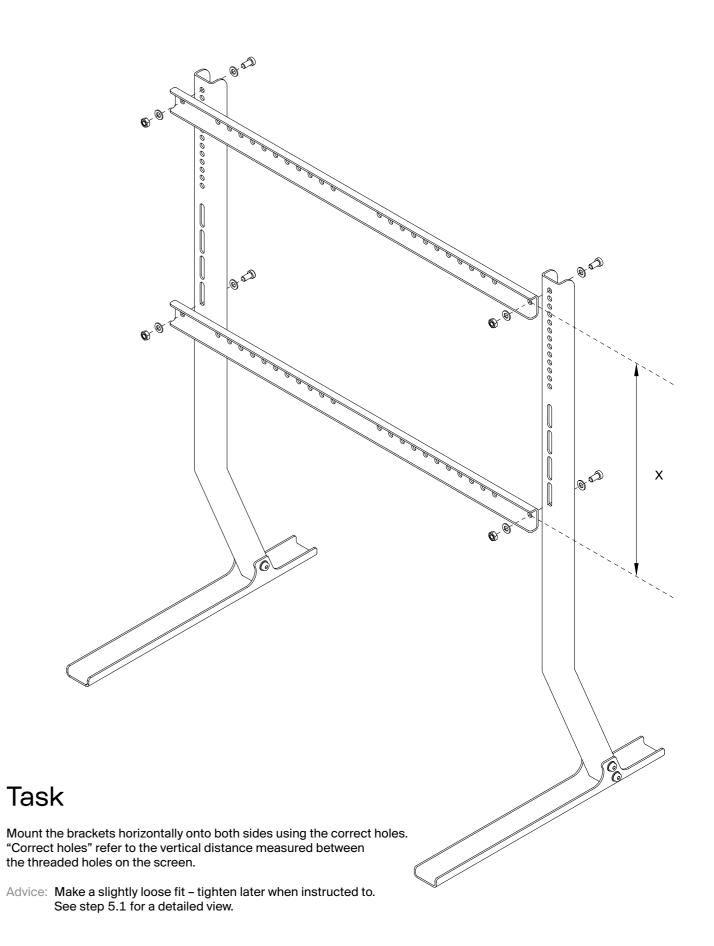


#### **Parts**

- $4 \times M8 \times 16$  mm bolts
- 8 x M8 washers
- 4 × M8 nuts



### 5.1 Mount brackets detail

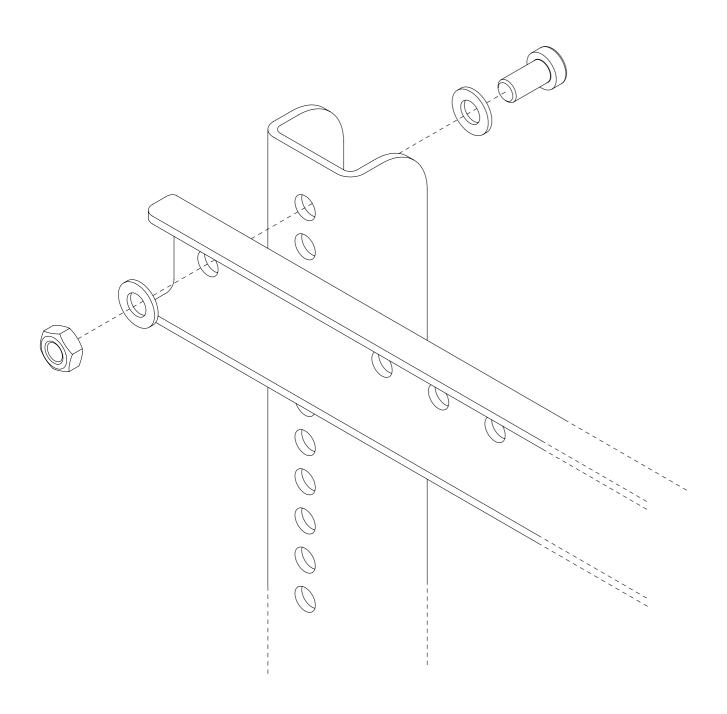


You're doing great!

Once the screen is mounted, your stand will be as steady as a rock.


Keep up the good work!


### 6.0 Mount stand

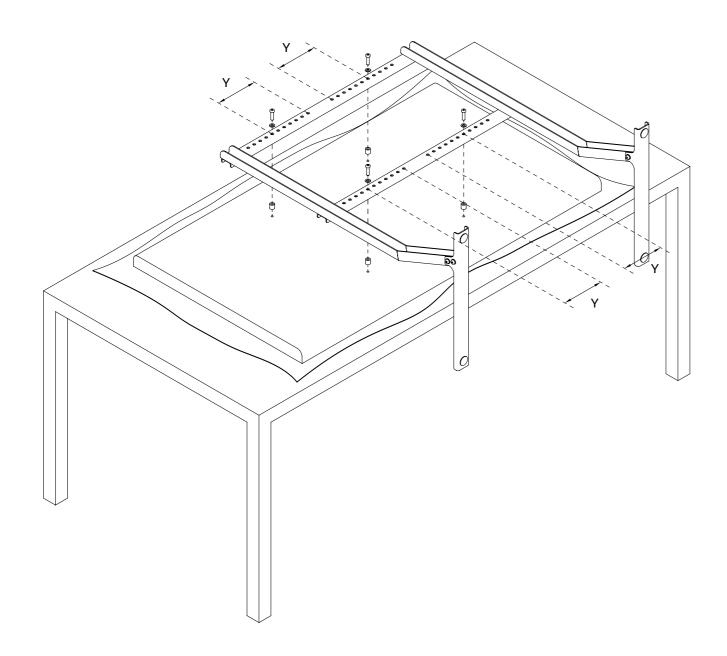


# 6.1 Stand fitting



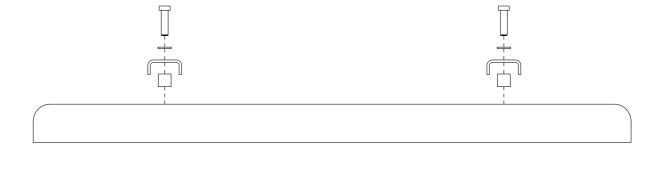



#### Incorrect fit

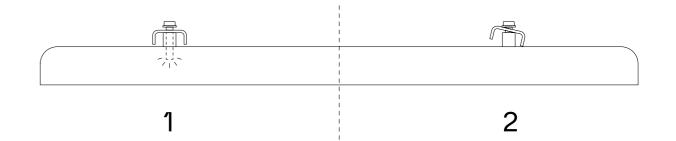

#### Task

While still lying on the table, connect the assembled stand to your screen. Make sure you place the stand horizontally centered, as shown. For a correct fit, see step 6.1.

#### **Parts**

- 4 × Suitably sized bolts
- 4 × M6/M8 washers

At least 4 × Suitably sized spacers

#### Do not panic!


You will not need all of the remaining hardware. The large selection of remaining hardware is to accommodate as many different screens as possible.


For a correct fit you will have to identify the right combination of provided spacers, washers and bolts.

Place the spacers between the screen and the brackets to ensure that the brackets do not touch the screen.

If for instance your screen has a curved backside, you might have to use more than one layer of spacers.

Now screw the appropriately dimensioned bolts with washers through the brackets and spacers into the threaded holes on the backside of the screen. Tighten the bolts until you have a snug fit. Be sure not to overtighten. The bolts must not reach the bottom of the threaded holes. Overtightening might cause damage to your screen.

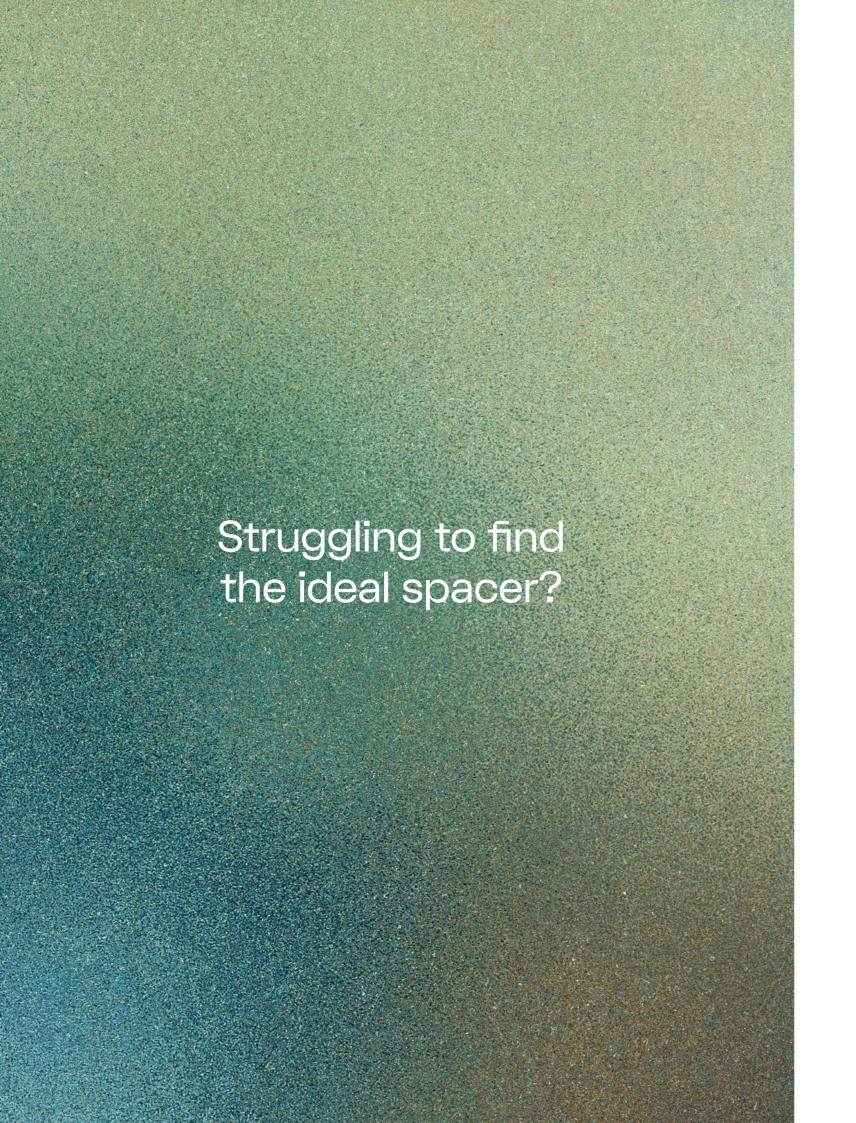


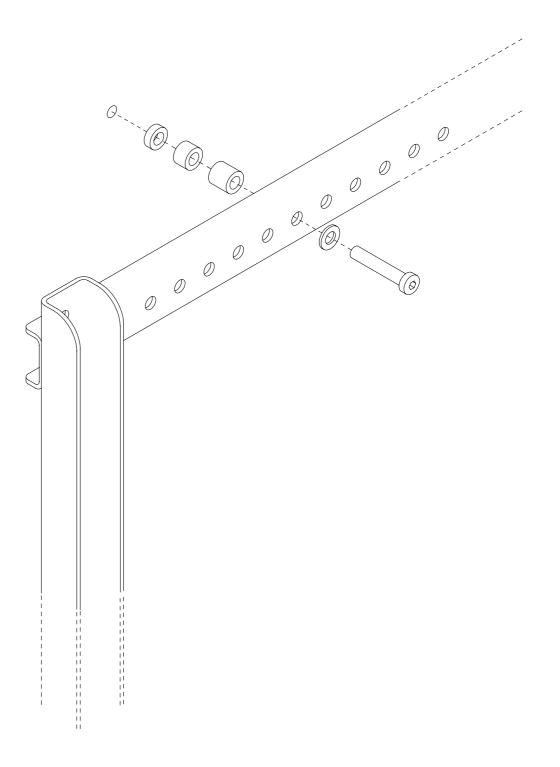

No problem!

Just stack 'em up, mix and match for the perfect fit!

# 6.2 Tighten connections

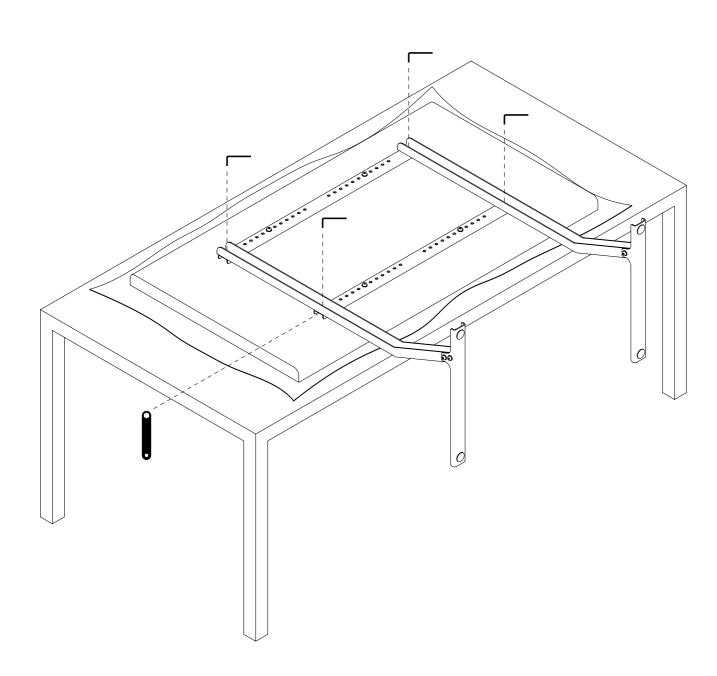

### Task


Now tighten all connections between the legs and the brackets.

#### **Parts**

1 × Hex key

1 × Wrench

# 7.0 Organize

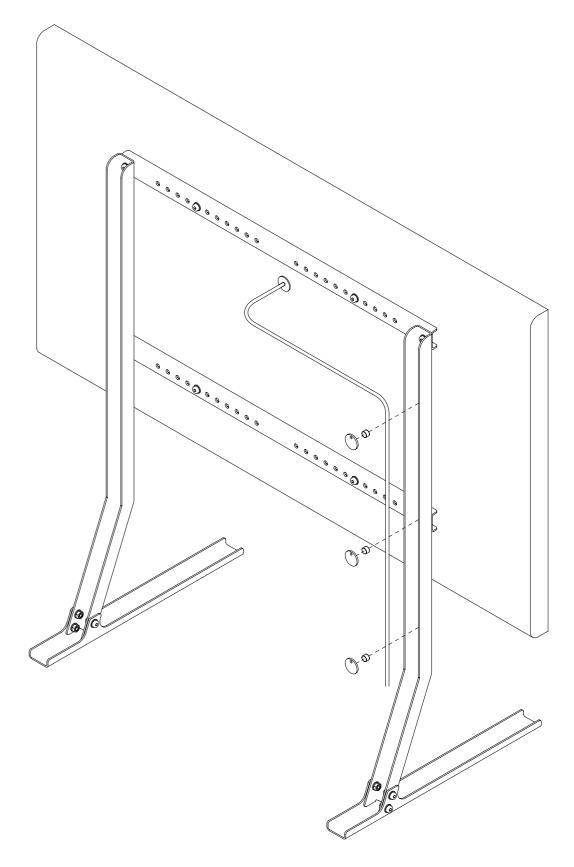


#### Task

Organize and hide your cables along the brackets and the legs of the stand with the included magnets and cable dots.

### **Parts**

3 × Magnets

3 × Cable dots

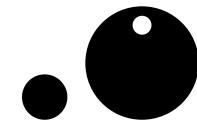

Popcorn ready

Screen steady



pedestal®

